

Q V A N T U M

QA-9/-15

Air-to-water heat pump



CONTENTS

1 Important information.....	3
General.....	3
Safety.....	3
Symbols.....	4
Product labels.....	4
Product identification.....	4
Product registration.....	4
Environmental information.....	4
2 Before installing.....	5
Transport.....	5
Installation area.....	5
Additional components.....	6
3 Components.....	7
Overview.....	7
Electrical box.....	7
4 Pipe installation.....	8
Pipe installation, general.....	8
Pipe connections.....	8
Preparations.....	8
Installation.....	9
5 Electrical installation.....	14
Electrical installation, general.....	14
Electrical connections.....	15
6 Commissioning.....	18
Before first start-up.....	18
First start-up.....	18
Compressor preheating.....	18
7 Service.....	19
General.....	19
Maintenance.....	19
8 Troubleshooting.....	20
Before troubleshooting.....	20
The heat pump does not start.....	20
No communication with hydronic unit.....	20
Insufficient hot water production.....	20
Low room temperature.....	20
High room temperature.....	20
Frost build-up on evaporator.....	20
Continuous ice build-up.....	21
Abnormal noise.....	21
9 Technical specifications.....	22
Sound levels.....	22
Dimensions.....	22
Operational data.....	22
Technical data.....	24
Energy labelling.....	25
Index.....	29

1 IMPORTANT INFORMATION

General

WARNING

Read this manual before starting the unit for the first time.

It is the owner of the product that is responsible for the system. If you suspect that the product is defective, contact your dealer.

TIP

For the latest available product documentation, visit quantum.com.

Safety

This appliance can be used by children from 8 years and above and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance. Cleaning and maintenance must not be performed by children unless they are older than 8 and supervised.

The manual must be available for people who install, support or use the product.

Work must follow the instructions described in this manual. Companies and persons installing and maintaining the product must have the required certificates, licenses and qualifications.

The work must comply with current regulations and practices and be carried out professionally.

When powering up the product, there must be no frozen water in the system.

Wiring and electrical installation must be performed in compliance with national regulations.

It must be possible to safely disconnect the electrical power supply to the unit. Install the power supply with an isolator switch and size the cable area based on the fuse rating that is being used.

R290 refrigerant

R290, a flammable refrigerant, is present in the product. In the event of a leak, leaking refrigerant might combine with air and create an environment that could catch fire.

WARNING

It is prohibited to expose the product to flammable gases or liquids as it may cause fire.

WARNING

The unit must not be placed close to flammable gas. Fire may start if there is a gas leak of any kind.

WARNING

Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.

Safe area

WARNING

The heat pump must be installed outdoors. The unit must be installed so that, in the event of a leak, refrigerant cannot enter the building.


Vertically, the safe area stretches from the top of the product to ground level (H1 in the following image).

From the top of the product, the safety zone extends 0.5 m from the product's outer edges.

At ground level, the safety zone extends one meter from the product's outer edges.

NOTE

The safe area is not to be mistaken for the allowed installation area.

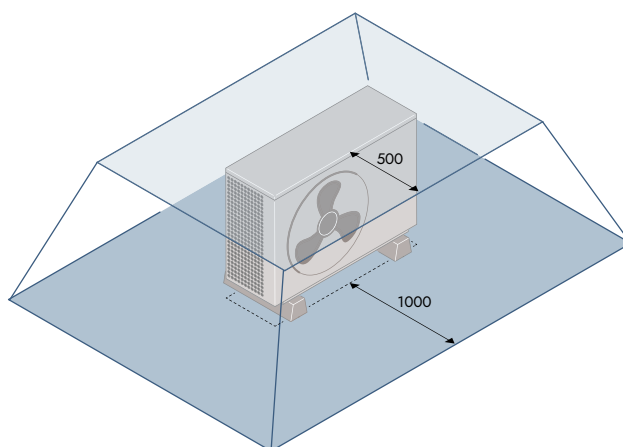

Windows, doors, ventilation openings, and potential ignition sources must not be present in the safe area. The safe area extends into neighboring structures. All wall penetrations in outer walls must be gas-tightly sealed.

Symbols

The manual contains the following symbols

WARNING

This symbol describes information that is of great danger to people or equipment.

CAUTION

This symbol describes information that could cause danger to people or equipment.

NOTE

This symbol describes information that is crucial when installing or servicing the product.

TIP

This symbol describes information that can be helpful when installing or servicing the product.

Product labels

These labels are found on the product.



CE marking indicates that a product has been assessed by the manufacturer and deemed to meet EU safety, health and environmental protection requirements.

IPX4

Protection classification against water and dust in the electrical enclosure.



Warning label that indicates that the product contains flammable material.



Warning label that indicates that open flames or other ignition sources are prohibited.




Read the supplied documentation.



Read the supplied documentation.

Product identification

The product identification label is visible on the right-hand side of the product.

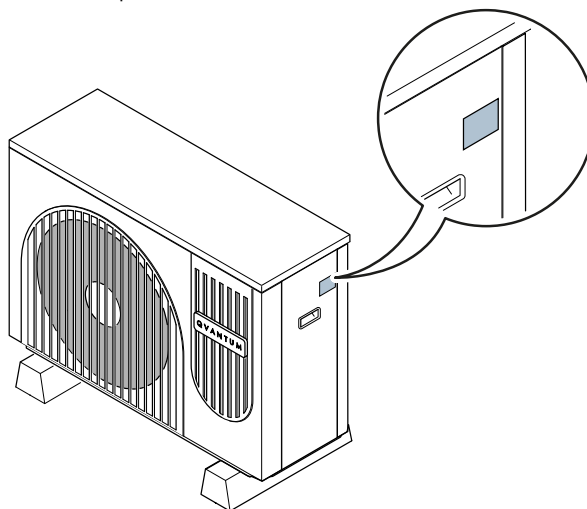

Product registration

The product must be registered for the warranty to take effect. The product can be registered no more than 12 months after the delivery date from the factory and no more than one month after the installation. If the product is registered at a later stage, the warranty period will be affected.

The product registration is done as part of the start-up guide in the Quantum app when setting up the Quantum hydronic unit.

Environmental information

Recycling



At the end of the electrical products useful life, it must not be disposed of with household waste.

Recycle at waste facility. Check with your local authority or retailer for local recycling regulations.

Packaging content


The product packaging contains the following materials.

MATERIAL		QA-9	QA-15
Cardboard	kg	6,5	9,2
Plastic	g	80	80
Wood (pallet)	kg	13,5	15,7
Metal	g	5	5

2 BEFORE INSTALLING

Transport

Transport the product in an upright position. Ensure that the product is adequately secured so it does not fall down during transit.

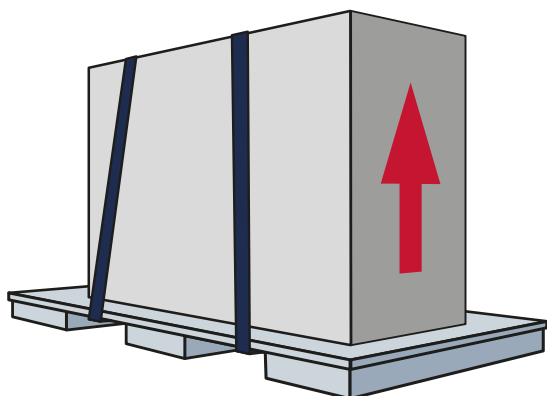

At arrival, ensure that the product was not damaged during transport.

If using a trolley or hand truck when moving the product, always have the product standing on the pallet.

Installation area


Measurements

When installing the unit, ensure that there is enough room for the inlet and outlet air. There must be at least 300 mm of free space behind and 1500 mm in front of the heat pump.

For service, keep at least 1000 mm of free space on the right, 500 mm on the left, and 600 mm above the heat pump.

NOTE

Consider the height of obstacles surrounding the heat pump. High walls or other barriers can cause resonant sounds and unwanted recirculation of cold air.

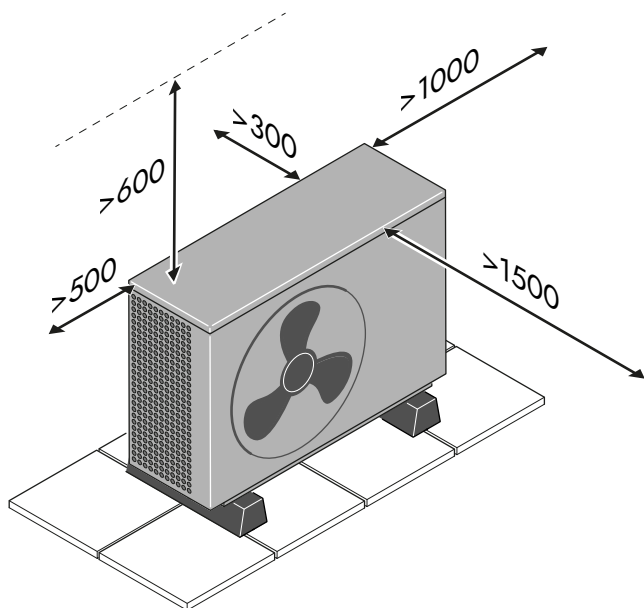

Prerequisites

Install the heat pump in accordance with the following requirements.

NOTE

If the heat pump is placed on concrete slabs, the slabs must rest on shingles or asphalt.

Place the heat pump on a solid surface that can withstand the weight of the heat pump.

- a) Do not place the heat pump directly on a lawn or a similar non-solid surface.
 - b) Place the heat pump on a concrete base, concrete slabs or equivalent.
- Ensure that the heat pump is level.

NOTE


If the heat pump cannot be installed level, the lowest point must be at the condensation water outlet.

- Ensure that the installation area is adequately ventilated.

NOTE

In case of leakage, the refrigerant must not enter the house through ventilation openings, doors or windows.


- Direct wind can reduce the performance and defrosting of the product. Install the product in a place protected from direct wind.
- Ensure that the installation area is free from heat radiation, fire hazards and ignition sources.
- Do not position the heat pump next to a noise sensitive wall.
- Ensure that condensing water is drained away from the heat pump.
- Ensure that the heat pump is protected from snowfall and kept free from snow.
 - a) Ensure that the heat pump is positioned at least 100 mm above the expected snow level.
 - b) In areas with heavy snowfall, install the unit where snow will not accumulate.
 - c) If there is a risk of snow falling onto the heat pump, protect the heat pump by installing adequate snow protection.

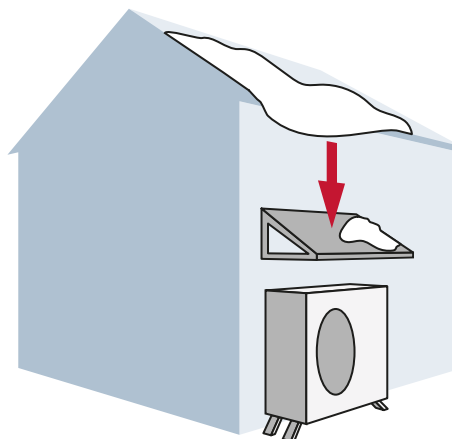

Install the rubber mounts

This instruction describes how to install the rubber mounts on the heat pump.

1. Lift the heat pump and place it on the rubber mounts.
2. Slide the T-bolts into the slots of the rubber mounts on all four corners of the heat pump.
3. Connect the T-bolt into the brackets at the bottom of the heat pump.

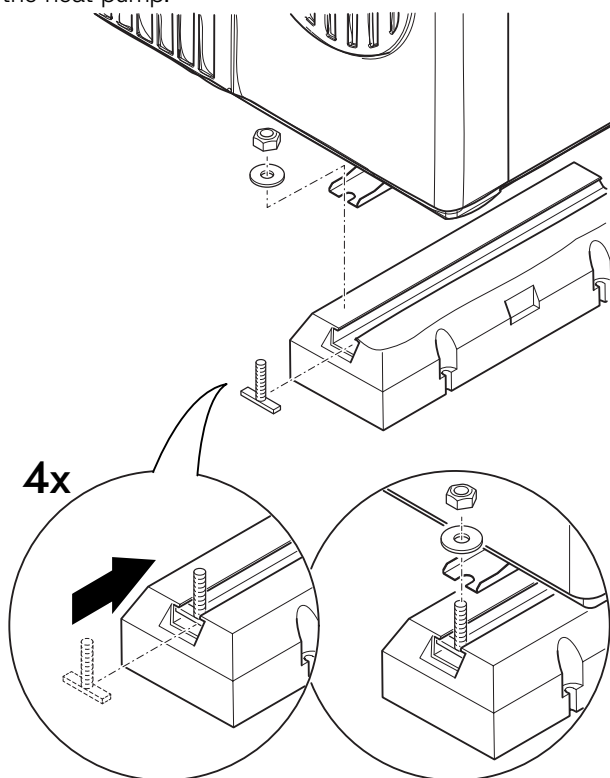

4. Secure the heat pump with washers and nuts on the T-bolts.

TIP

There must be a proper slope for the drainage in the back left corner. To adjust the height of the heat pump, place washers under the feet of the heat pump.

Additional components

Supplied components

The supplied components package contains the following items:

- Gas separator kit
- Two rubber mounts

Accessories

The product can be complemented with the following accessories.


ACCESSORY	PART NUMBER
Frost protection	1006963

3 COMPONENTS

Overview

The Quantum QA is an outdoor air heat pump unit that is installed with a Quantum QH hydronic unit.

The piping system is connected through connections that are on the back of the unit. The electrical system is connected to terminal blocks that are on the side of the unit.

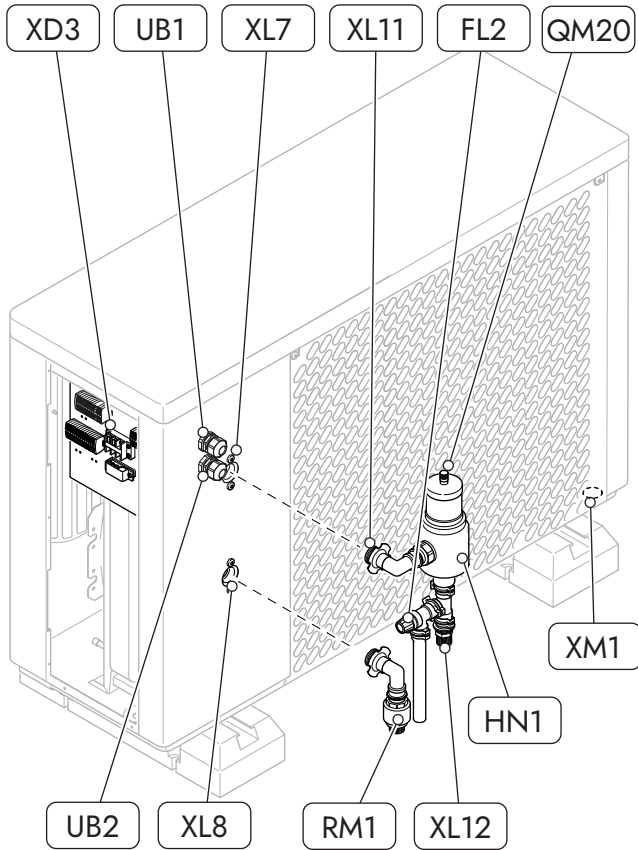

ID ¹	COMPONENT
FL2	Safety valve, distribution system
HN1	Gas separator
RM1	Check valve
UB1	Cable entry, power supply
UB2	Cable entry, communication
XD3	Junction box
XL7	Docking connection, outlet
XL8	Docking connection, inlet
XL11	Gas separator, inlet
XL12	Gas separator, outlet
XM1 ²	Drain outlet, condensation
QM20	Bleed valve, distribution system

¹ Component designations in accordance with IEC 81346.


² A drain connector accessory is required to connect the pipe/hose to the drain outlet.

Electrical box


ID ¹	COMPONENT
UB20	Cable retention, power supply
XD1	Terminal block, power supply
XD2	Terminal block, communication and sensors

¹ Component designations in accordance with IEC 81346.


QA-9

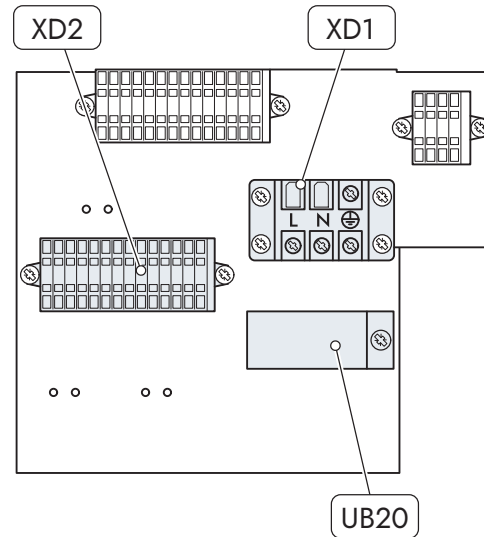

QA-15, 1-phase

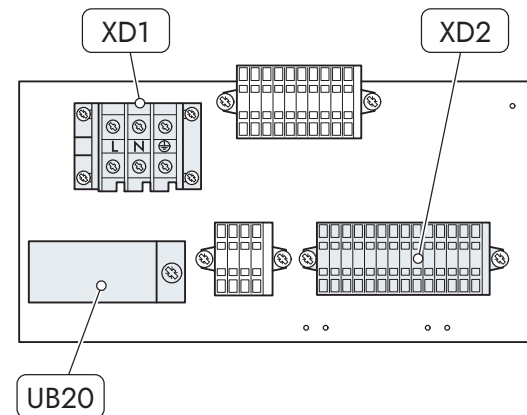

QA-15, 3-phase

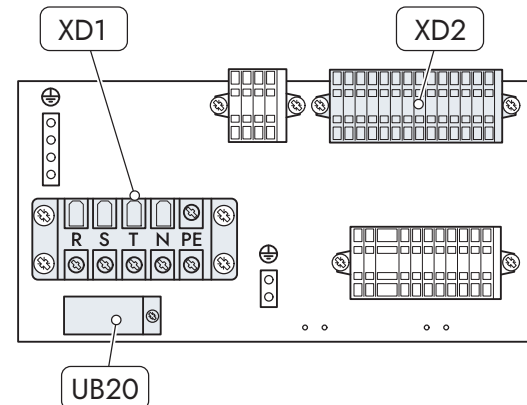

4 PIPE INSTALLATION

Pipe installation, general

NOTE

The pipe installations must be performed in accordance with applicable regulations.

NOTE

If a condensate drain is connected to the drain outlet (XM1), install it sloping downward from the heat pump along its entire length.

NOTE

The pipework must be dimensioned so that the minimum required flow is maintained.

NOTE


Size all pipework to ensure sufficient flow during normal operation and defrosting.

CAUTION

Insulate all outdoor pipework to reduce heat loss and protect the pipes from freezing.

Pipe connections

Measurements and dimensions

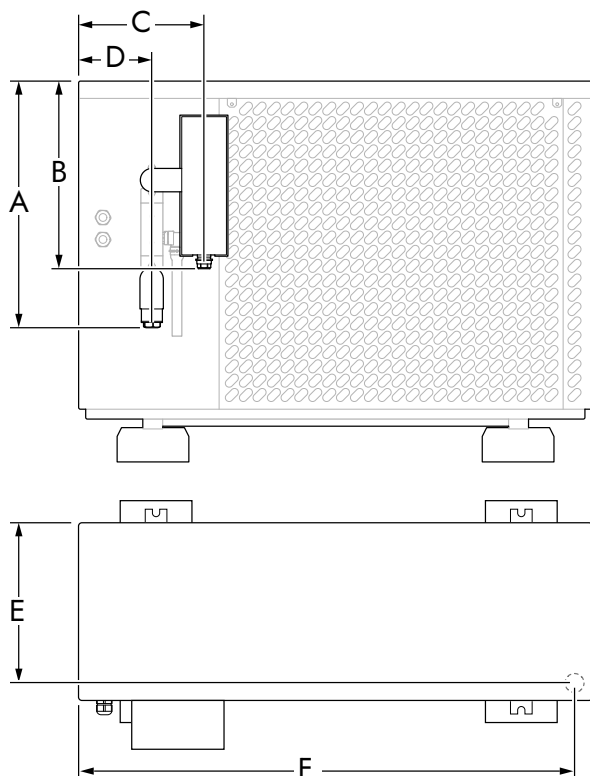


	QA-9	QA-15
A	575 mm	686 mm
B	445 mm	551 mm
C	283 mm	237 mm

	QA-9	QA-15
D	165 mm	118 mm
E	353 mm	398 mm
F	1108 mm	1218 mm

Preparations

Assembly of gas separator kit


Assemble the gas separator kit before starting the pipe installation.

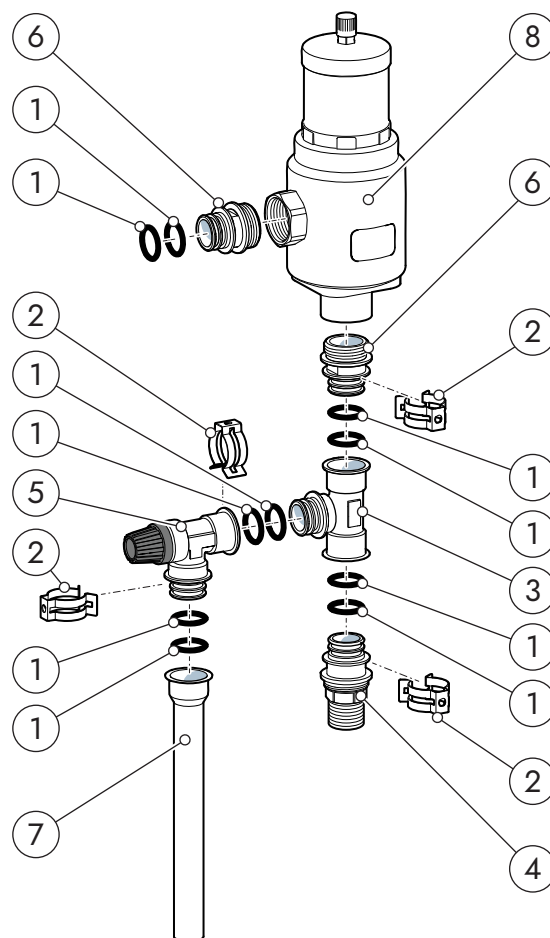


ID	COMPONENT
1	O-ring
2	Clip
3	T-connection
4	System connector
5	Safety valve
6	Adapter connection
7	Pipe
8	Gas separator

Vertical pipe routing

If the pipes are routed vertically, use the supplied extension for the gas separator housing to cover the pipes.

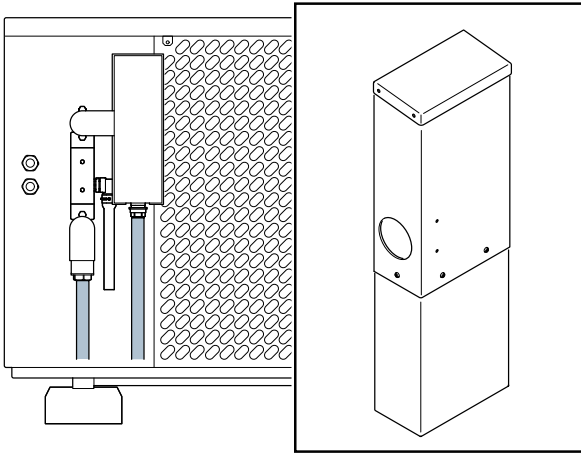


1. Place the extension inside the gas separator housing.
2. Fasten the extension with the supplied screws and washers.

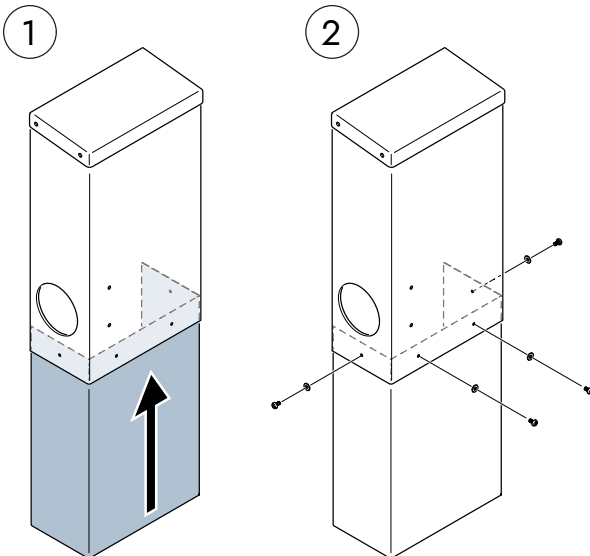

Horizontal pipe routing

If the pipes are routed horizontally, use the gas separator housing without the supplied extension to cover the pipes.

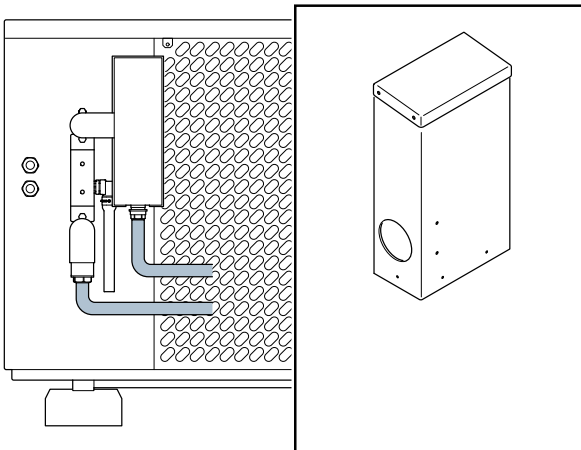

Recommended installation


Install the following components in the heating medium circuit to make future maintenance easier.



NOTE

The product is not equipped with shut-off valve and safety valve for the heating medium circuit.

- Install a shut-off valve on the heating medium supply line.
- Install a safety valve with an opening pressure of 3.5 bar on the heating medium supply line.
- Install a filter ball valve on the heating medium return line.



Installation

1. Install the supplied 90-degree couplings in the pipe connections at the back of the unit.




NOTE

Seal the threads of the couplings before installing them.



CAUTION



Do not remove the pre-fitted screws that are mounted above and below the pipe connections.

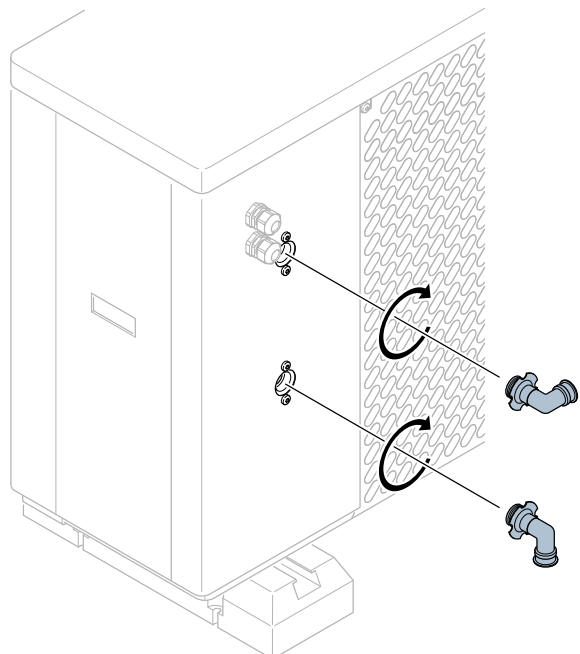


2. Ensure that the 90-degree couplings are mounted so that the coupling for the heating medium supply (XL7) points to the right and that the coupling for the heating medium return (XL8) points downwards.

 NOTE

Ensure that the distance between the back of the product and the top of the flanges of the couplings is 6 – 7.5 mm.

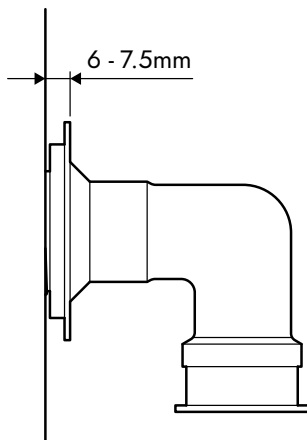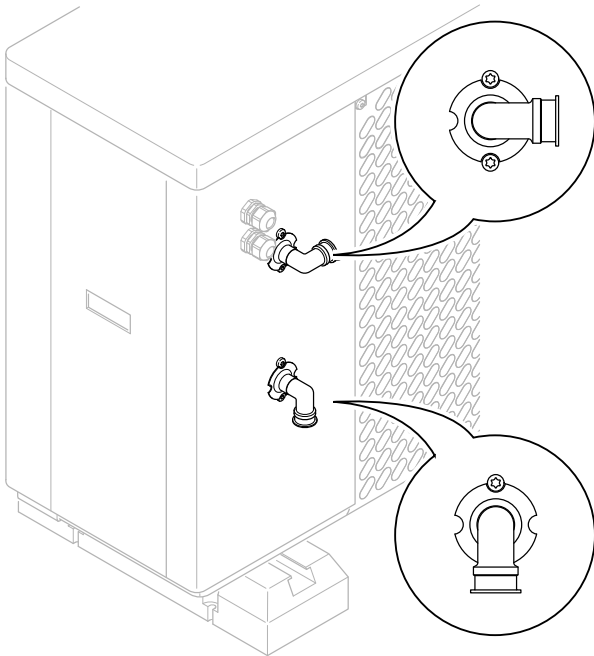

3. Remove the pre-fitted screws from the unit.

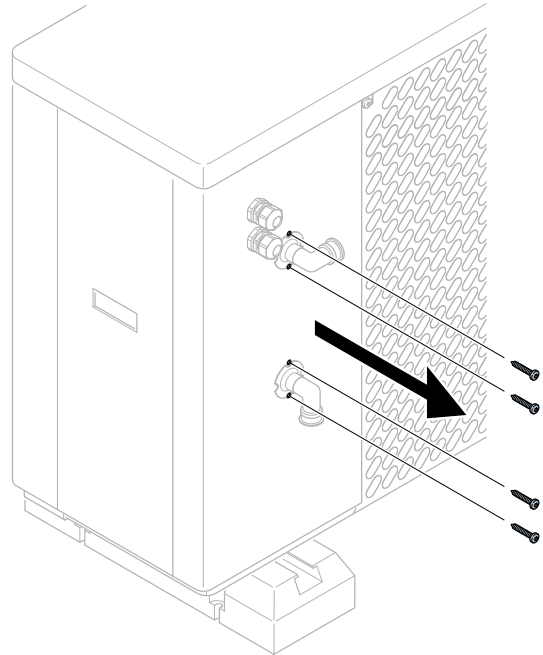


4. Fasten the 90-degree couplings and the supplied bracket with the supplied hexagonal screws.

 CAUTION


Fasten the top and bottom screws before fastening the bracket.

 NOTE


Place the bracket on top of the coupling flanges.

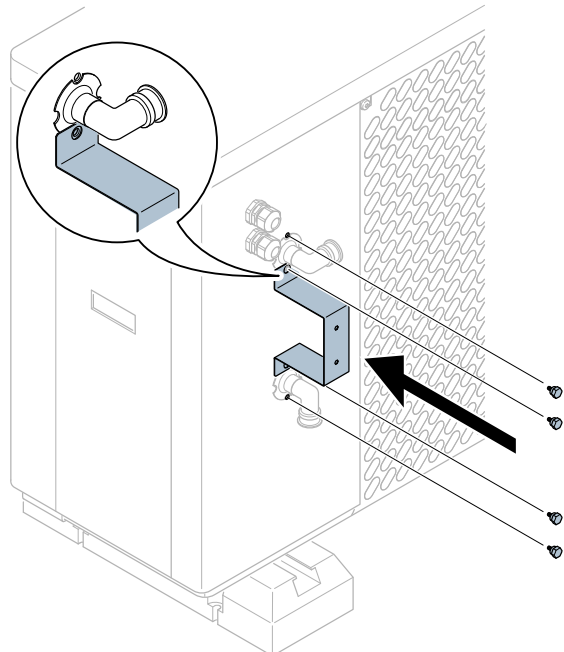


5. Install the gas separator (HN1) on the upper 90-degree coupling and the check valve (RM1) on the lower 90-degree coupling.

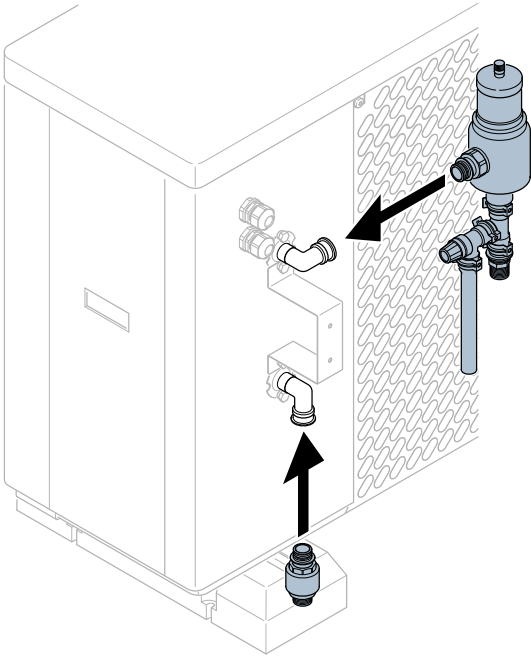


7. Attach condensation insulation along the pipes, from the back of the heat pump to the gas separator and over the check valve.

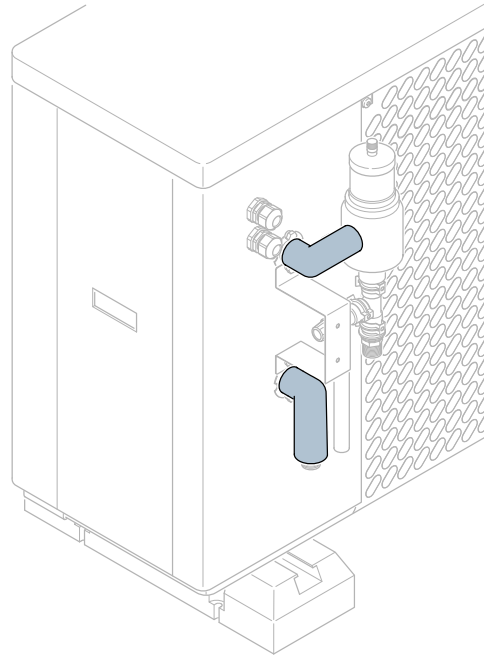

6. Mount the supplied click-fittings at the pipe transitions.

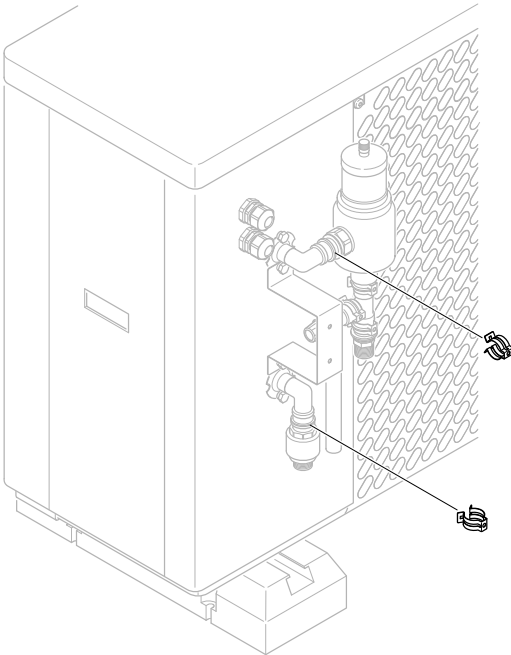


8. Install the rear and front insulation blocks around the gas separator.

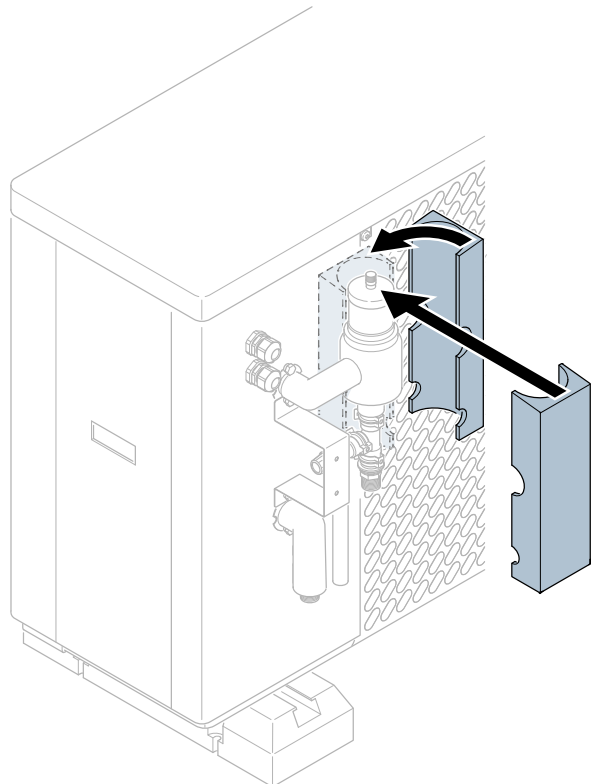


9. Install the pipes for the distribution system to the unit.
a) Connect the heating medium supply line to the gas separator outlet (XL12).

b) Connect the heating medium return line to the check valve connection (XL13).

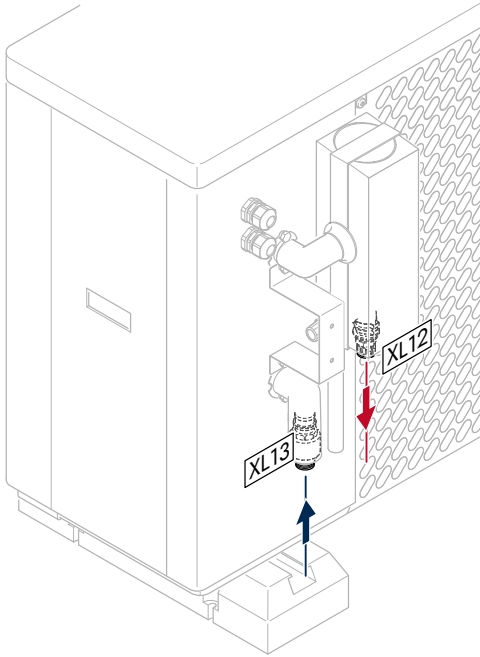

11. Install self-adhesive condensation insulation around gaps and pipe penetrations.

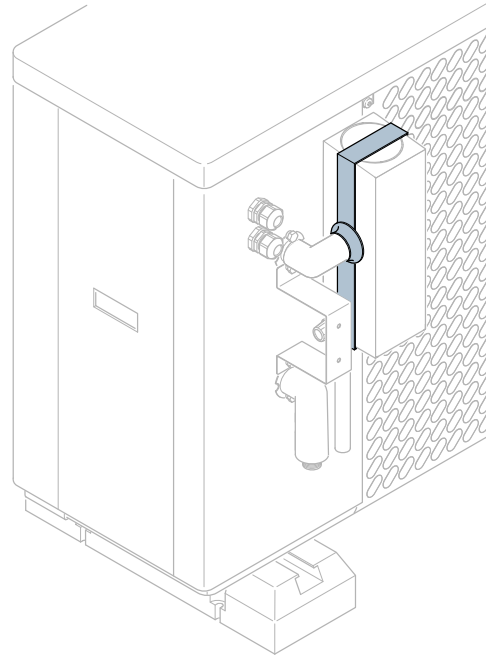


10. Mount the circular insulation lids at the top and bottom of the insulation blocks.




NOTE


Mount the angled insulation lid at the top, and the open-end insulation lid at the bottom.

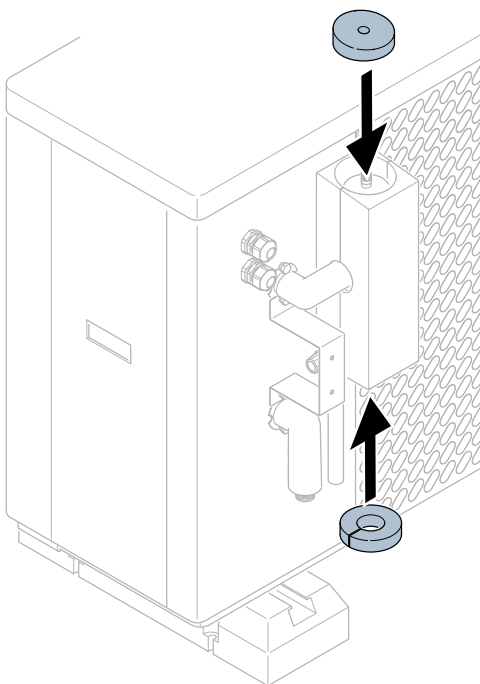

12. Install the gas separator casing on the bracket by using the supplied screws and washers.

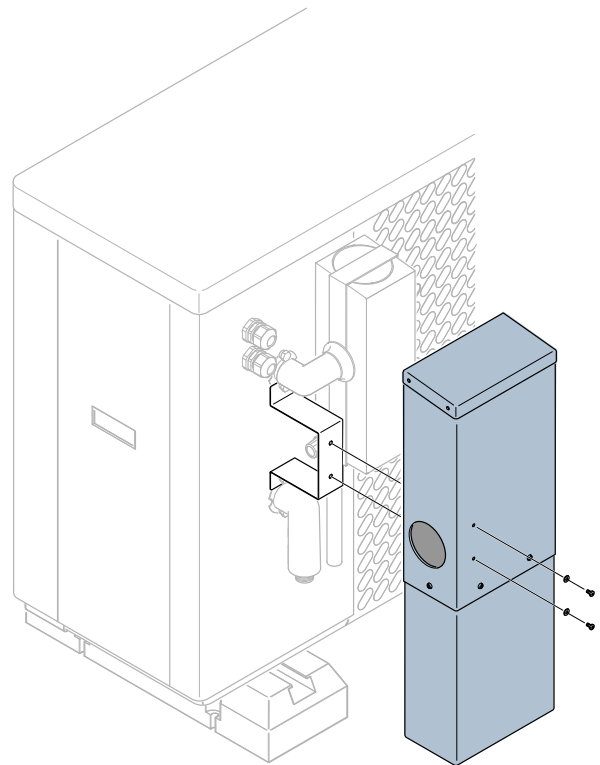

- 13.** Attach the cover for the safety valve (FL2) to the gas separator casing.

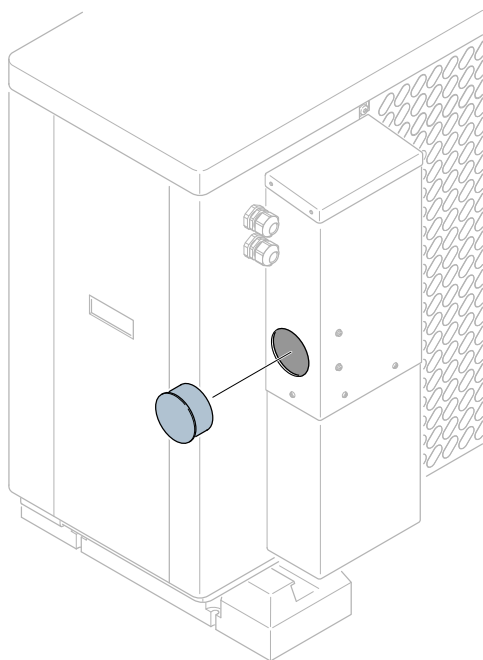

5 ELECTRICAL INSTALLATION

Electrical installation, general

**WARNING**

All electrical connections must be performed by a qualified electrician and in accordance with applicable regulations.

**CAUTION**

Do not start the unit until it has been filled with water and all electrical connections have been checked. Premature start-up can cause damage to internal components.

- The unit must be disconnected before the house wiring is insulation tested.
- Power cables should be placed at least 200 mm from communication and sensor cables.
- The product must be installed with a separate residual current device (RCD, type B) with a tripping current of 30 mA.


**NOTE**

An RCBO may be used as an alternative, provided it provides equivalent residual current protection and incorporates the required overcurrent (fuse) protection.

Cable channels

The heat pump has cable glands on the back of the unit.

ID	CONNECTION TYPE
UB1	Power supply
UB2	Communication and external connections

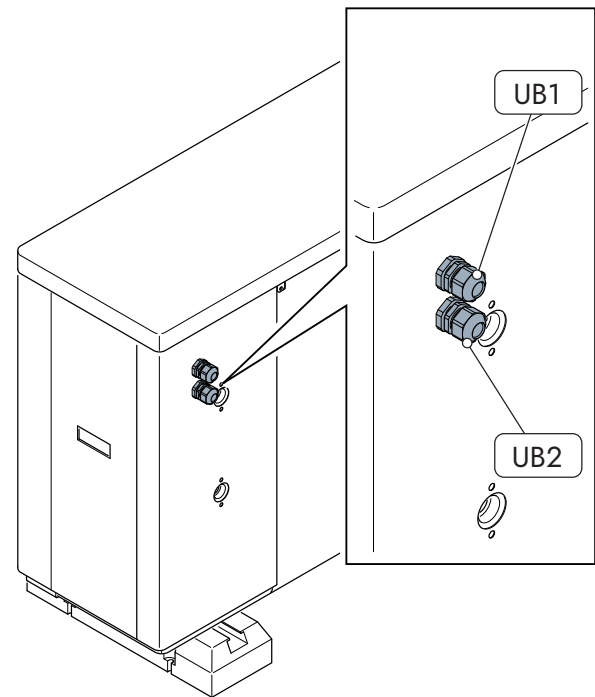


Access


Removal of side cover

This section describes how to access the electrical connections in the heat pump.

1. Hold the side cover in place.
2. Release the screws at the bottom of the side cover.

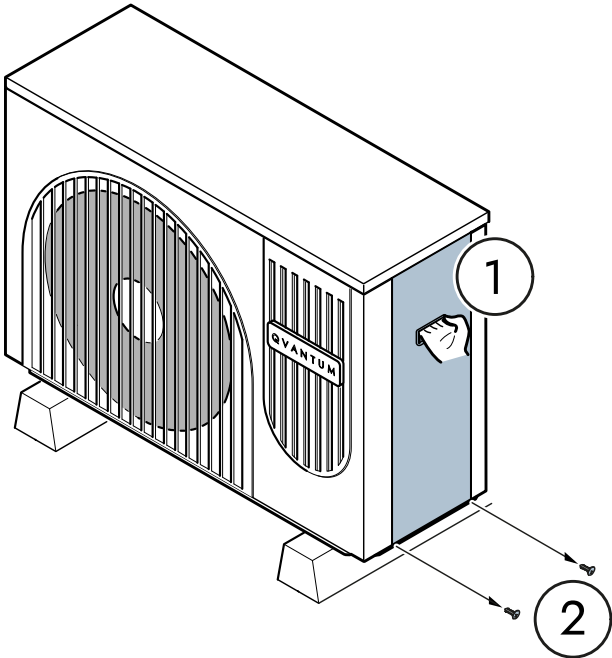


3. Slide the side cover downwards.
4. Remove the side cover from the heat pump.

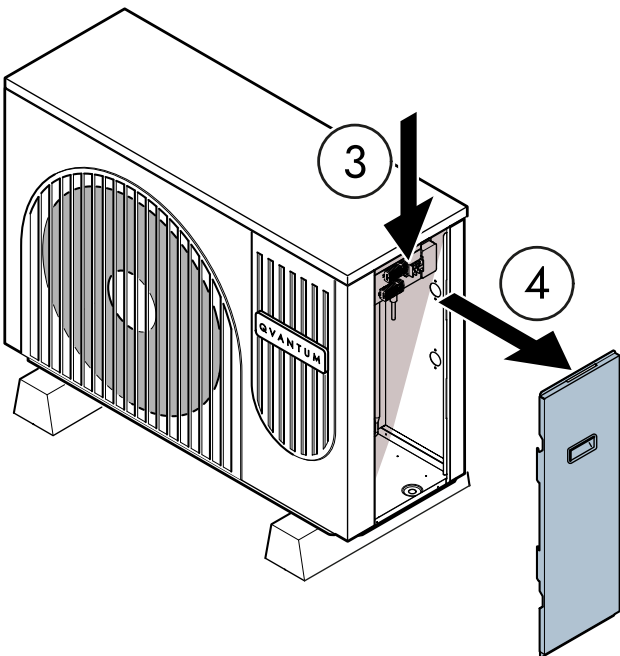

Removal of top cover

This section describes how to remove the top cover of the heat pump.


1. Remove the screws from the top of the heat pump.

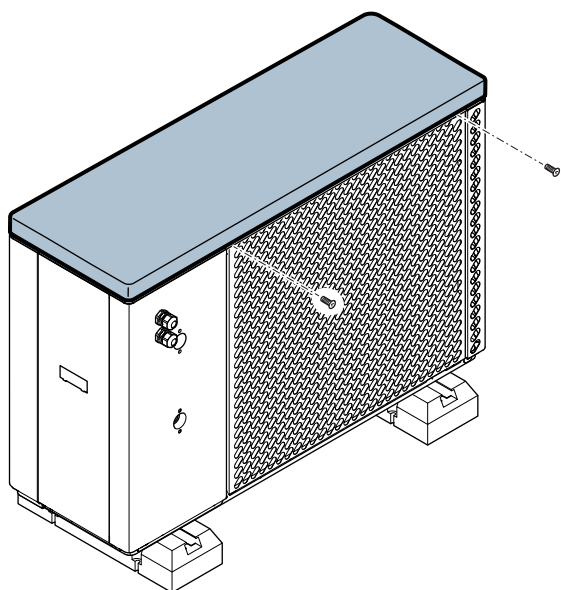

2. Remove the top cover of the heat pump.
 - a) Tilt the rear of the cover upwards.
 - b) Slide the cover forward.

NOTE

To allow the cover to come off the front clips, it must not be angled too high when disassembling.

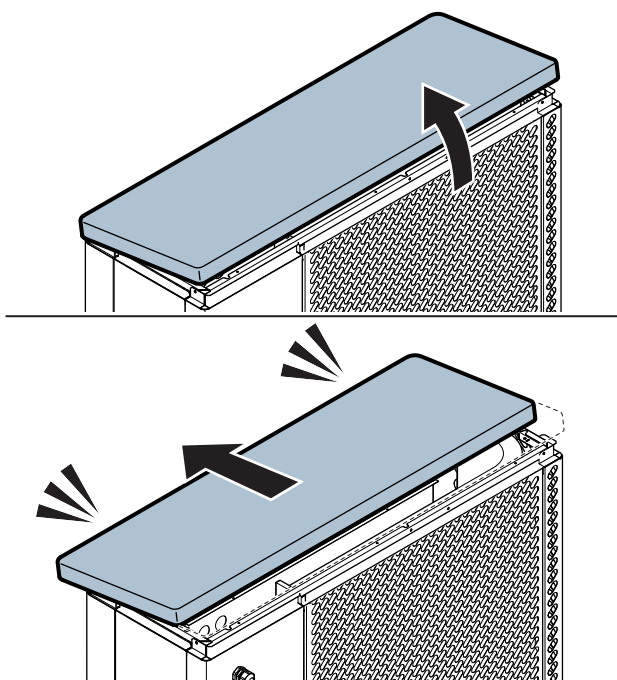

Electrical connections

Power connection

An isolator switch with a 3 mm minimum breaking distance must be used to install the unit. Size the minimum cable area in accordance with the fuse rating that is being used. Dimension the fuse size according to the following table.

MODEL	FUSE SIZE
QA-9	16 A (class C)
QA-15, 1×230 V	25 A (class C)
QA-15, 3×400 V	13 A (class C)

The power supply is connected to screw terminal block XD1.


NOTE

Secure the supply cable with the cable retention (UB20) on the junction box (XD3).


1×230 V

NOTE

If installed with a Quantum QH 3×400 V, it is recommended that the QA is connected to L3 in the main distribution board of the property.

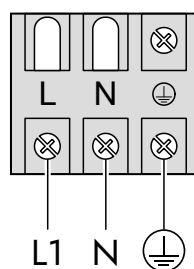


3×400 V

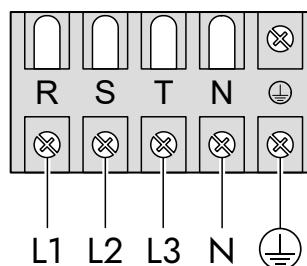


Hydronic unit

Connect the hydronic unit communication to spring load terminal blocks on XD2.


QA9

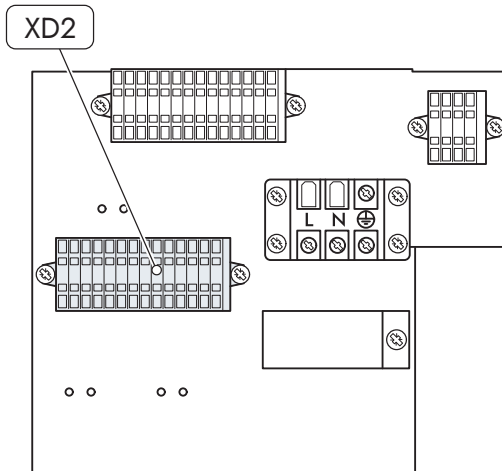

QA15-1

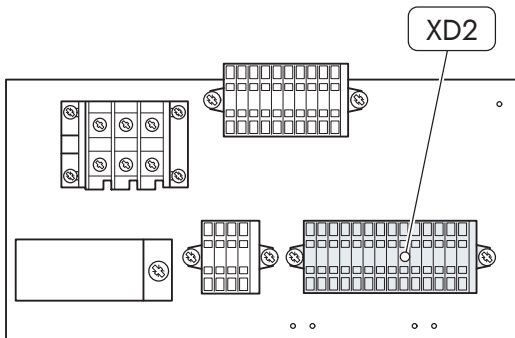

QA15-3

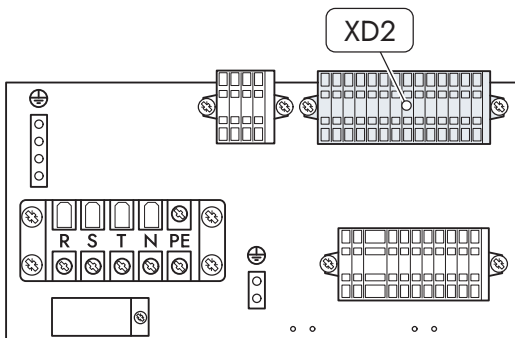

NOTE


If installed, remove the jumper between terminal blocks 11 and 12.

Connect the cables by inserting a screwdriver or similar at the top of the terminal block (1). When the spring in the terminal block is open, insert the cable (2).

The communication cable should be of type S/UTP, S/FTP or equivalent twisted-pair cable with a braided shield. The shield connects with grounding clips or a terminal block, depending on the hydronic unit version.


NOTE

Do not connect the shield to the heat pump unit.

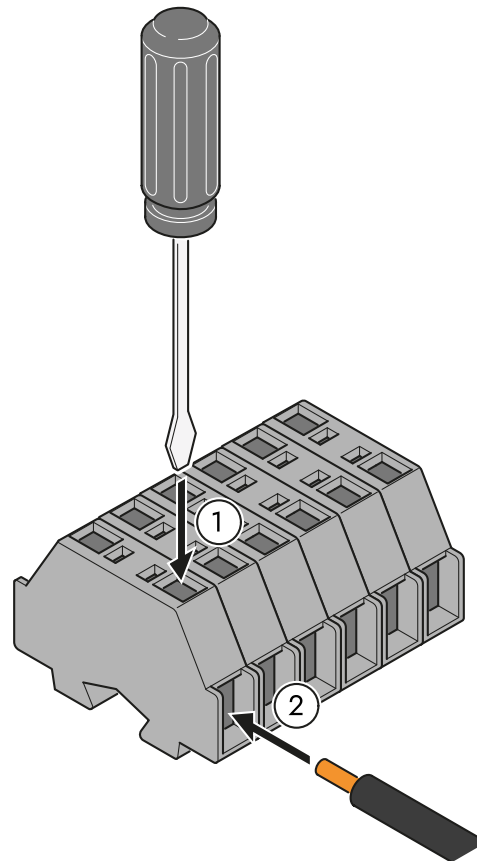

Hydronic unit with grounding clips


Attach the exposed shield to one of the grounding clips in the hydronic unit.

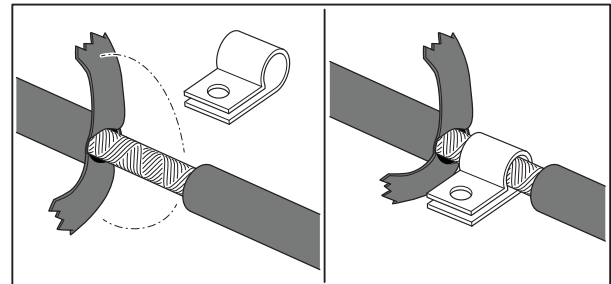

NOTE

Ensure that the shield has sufficient contact with the grounding clip.

Connect the communication wiring from the hydronic unit to XD2:12-14.

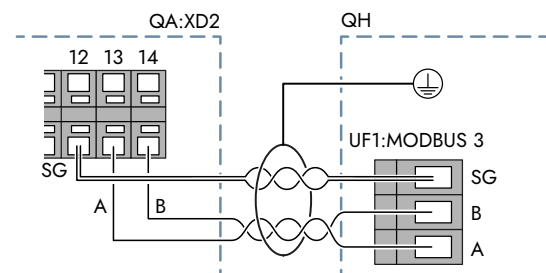

Hydronic unit without grounding clips

For hydronic units without grounding clips, connect the shield to XD2:PE.


NOTE

Do not let the shield touch the main board (UF1) or parts on the main board in the hydronic unit.

NOTE

The shield must not be exposed between the cable sheath and the connection point (XD2:PE).

Connect the communication wiring from the hydronic unit to XD2:12-14.

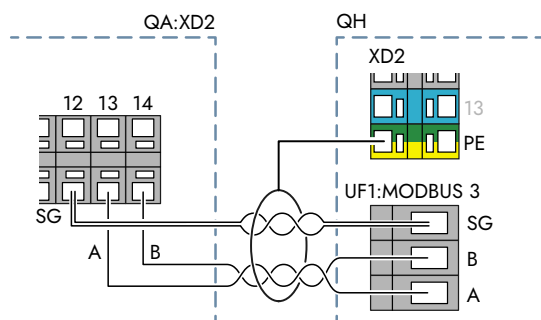

6 COMMISSIONING

Before first start-up



CAUTION

Before the first start-up, ensure that there is no frozen water in the system.



NOTE

Before the first start-up, ensure that there is water in the distribution system.

- Ensure that all pipe connections are correct and tightened.
- Ensure that the gas separator and the gas separator housing are mounted correctly.
- Ensure that the power supply to the heat pump is installed correctly.
- Ensure that the communication cable to the hydronic unit is installed correctly.
- Reassemble all covers.

First start-up

1. Turn on the isolator switch.
2. Verify that the heat pump is powered on.
3. Wait approx. 15 minutes before powering on the hydronic unit.




TIP

The compressor starts approximately one minute after a demand is detected by the controller.

4. If necessary, adjust affected settings through the display in the hydronic unit.

Compressor preheating

When the product is powered on, the compressor may enter a preheating mode before it can start. The preheating time depends on the outdoor air temperature. If the outdoor temperature is above +10 °C, preheating is not needed. If the outdoor temperature is below -25 °C, the compressor cannot start.

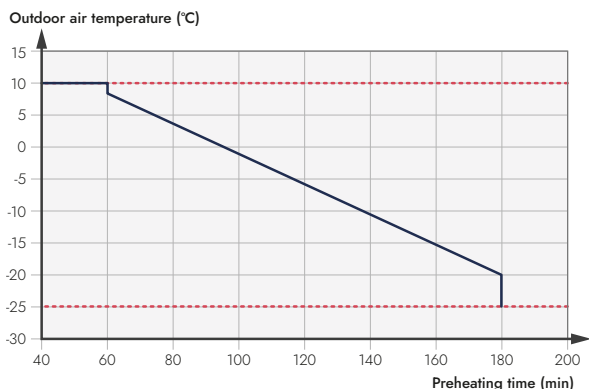

7 SERVICE

General

CAUTION

Maintenance and servicing must be performed by persons with sufficient knowledge about the task.

Maintenance

NOTE

The end user must be informed about necessary maintenance actions.

Regular checks

In order to prevent possible operational disturbances, regular checks of the heat pump must be carried out.

- Ensure that the unit is clean and free of debris.

NOTE

Clean the unit using hot water and a soft cloth. Do not use chemicals to clean the unit.


- Check that condensation water drain is not obstructed.
- Check the machine for uncontrolled ice formation.

Condenser draining

If an extended power failure occurs, it is necessary to drain water from the condenser to prevent freezing.


To safely drain the system proceed as follows:

1. Close the shut-off valve (A) on the heating medium supply line.
2. Close the filter ball valve (B) on the heating medium return line.

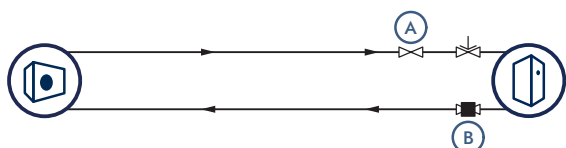

3. Open the safety valve (FL2) on the gas separator.
4. Release the pressure by opening the bleed valve (QM20) on the gas separator.

5. Disconnect the click-fitting and remove the check valve (RM1) on the heating medium return connection.

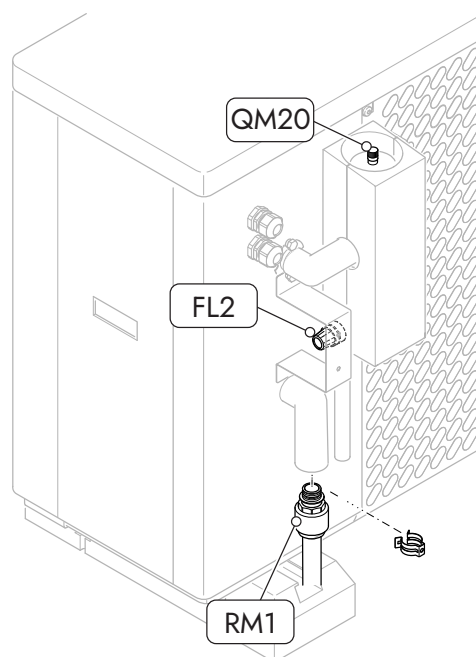

8 TROUBLESHOOTING

Before troubleshooting

If the system does not inform about an active fault, check the following components before troubleshooting:



WARNING

The incoming supply electricity must be isolated at the safety switch by or under the supervision of a trained electrician in the event that corrective action is needed to address faults that call for work inside screwed hatches.

- Power supply.
- Group and main fuses of the property.
- Residual current device (RCD).
- Internal fuses in the hydronic unit.
- Safety temperature limiter (FQ10) in the hydronic unit.
- That the air flow to the heat pump is not obstructed.

The heat pump does not start

An alarm is active

- Check the display unit of the hydronic unit for information about possible alarms.

No demand is active

- Heating or hot water production is not requested by the hydronic unit.

The compressor is blocked due to temperature limitations

- Ensure that the heat pump is not outside its operational range.

Compressor preheating is active

- Wait for the compressor preheating to finish.

Not enough time has passed since the previous compressor start

- Wait for approximately 30 minutes and see if the compressor starts.

No communication with hydronic unit

Incorrect power supply

- Verify the condition of the power supply for the heat pump unit.

Incorrect connection of communication

- Ensure that the communication cable is correctly installed.

Damaged communication cable

- Replace the communication cable.

Incorrect set-up in hydronic unit

- Ensure that the heat pump is correctly set up in the hydronic unit.

Insufficient hot water production

Increased hot water demand

- Wait until the target temperature for the hot water has been reached.

Air in the hydronic unit

- Purge the hydronic unit tank until only water comes out.

Incorrect hot water settings

- Check and, if necessary, change the hot water settings in the hydronic unit.

Obstructed filterball valve

- Turn off the power supply to the heat pump and clean the filterball valve that is connected to the heat pump inlet connection.

Low room temperature

Insufficient flow in distribution system

- Fully open several or all thermostats.

Incorrect room temperature settings

- Check, and if necessary, change the room temperature settings in the hydronic unit.

Air in distribution system

- Purge the distribution system.

Low compressor frequency

- Check the compressor frequency and make sure that the compressor parameters are adjusted properly.
 - a) If adjusting the compressor settings is not possible or insufficient, contact a service technician.

Fan is not running or is running too slowly

- Adjust the fan speed parameters.
 - a) If adjusting the fan speed settings is not possible or insufficient, contact a service technician.

Refrigerant leakage

- Check the exhaust temperature and the refrigerant pressure.
 - a) If a leakage is present, contact a service technician.

Obstructed filterball valve

- Turn off the power supply to the heat pump and clean the filterball valve that is connected to the heat pump inlet connection.

High room temperature

Incorrect room temperature settings

- Check, and if necessary, change the room temperature settings in the hydronic unit.

Frost build-up on evaporator

Insufficient air flow over the evaporator

- Check that the fan operates as intended.

Refrigerant amount issue

- Check the refrigerant pressure.
 - a) If a leakage is present, contact a service technician.

Too low compressor frequency

- Check the compressor frequency.
 - a) If adjusting the compressor settings is not possible or insufficient, contact a service technician.

Continuous ice build-up

Insufficient flow through the filter

- Make sure that the filters are clean and functioning.
 - a) If the filters are dirty, disassemble and clean them.
 - b) If the filters are damaged, contact a service technician.

Thermostats are not open

- Make sure that the thermostats are open.
 - a) If the thermostats are closed, open them.

Circulation pump not running

- Make sure that the circulation pumps are working correctly.
 - a) If the circulation pump is not working, contact a service technician.

Blocked condensate drain

- Make sure that the circulation pumps are working correctly.
 - a) If the condensate drain is blocked, clear the condensate drain.
 - b) If the condensate drain is broken, contact a service technician.

Faulty frost protection (if installed)

- If the frost protection cable is installed make sure it is working properly.
 - a) If the frost protection is not working, contact a service technician.

Abnormal noise

Unfastened screws

- Ensure that all screws are properly fastened.

Fan blade or fan motor

- Ensure that the fan is functioning correctly and is firmly mounted.
- Ensure that the fan blades are free of ice.

Compressor


- Ensure that the compressor is functioning correctly and is firmly mounted.

Adjoining components

- Ensure that sound is not carried by components touching each other.

9 TECHNICAL SPECIFICATIONS

Sound levels

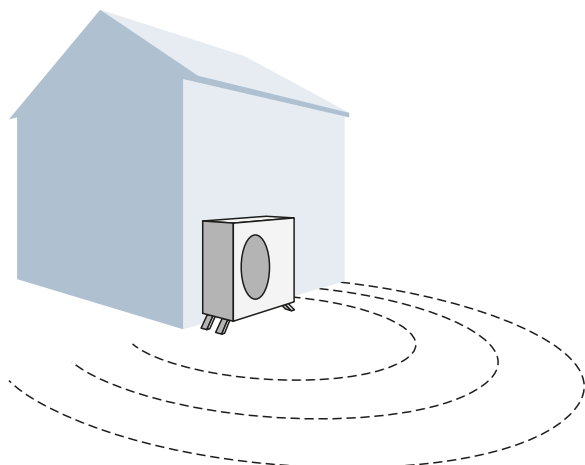


	QA9	QA15-1	QA15-3
Sound power level, $L_w(A)_{EN12102}$	58	57	58
Sound pressure levels¹			
At 1 m	53	52	53
At 2 m	47	46	47
At 3 m	43	42	43
At 4 m	41	40	41
At 5 m	39	38	39
At 6 m	37	36	37
At 7 m	36	35	36
At 8 m	35	34	35
At 9 m	34	33	34
At 10 m	33	32	33


¹ Sound pressure levels are calculated using directivity factor Q=4.

Dimensions

QA-9

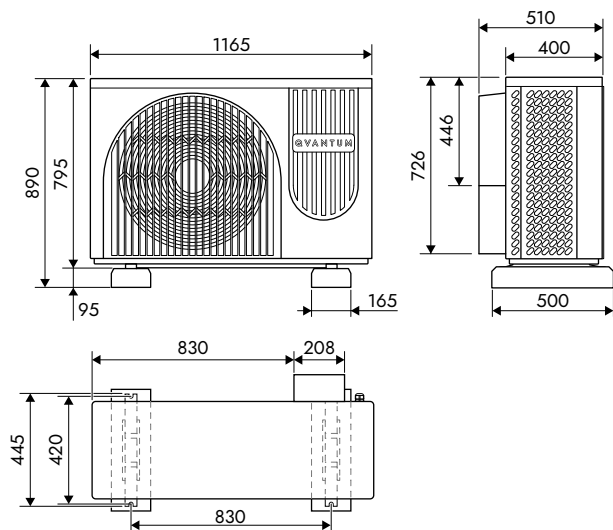

QA-15

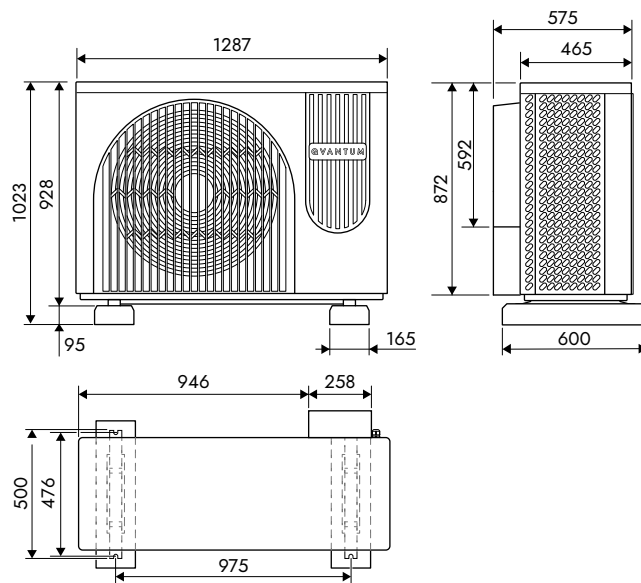


Operational data


Heating capacity

Heating capacity at supply line temperature 35 °C.

QA-9

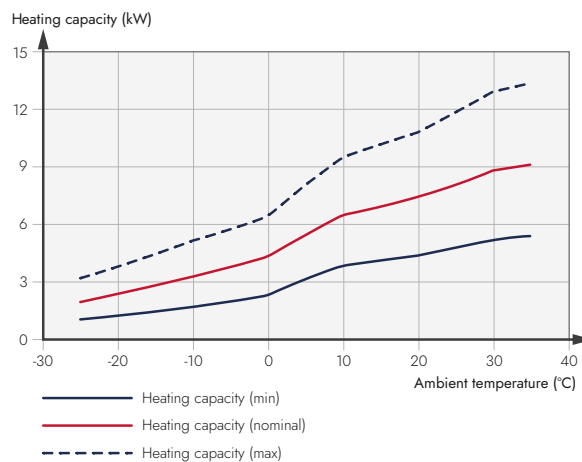


QA-15

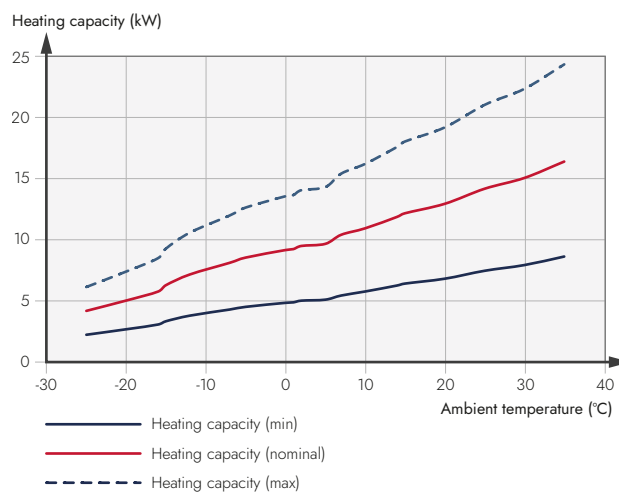


Cooling capacity

Cooling capacity at supply line temperature 18 °C

QA-9

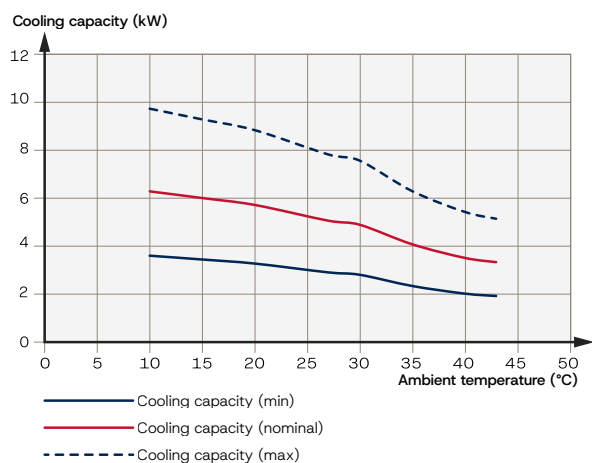


QA-15

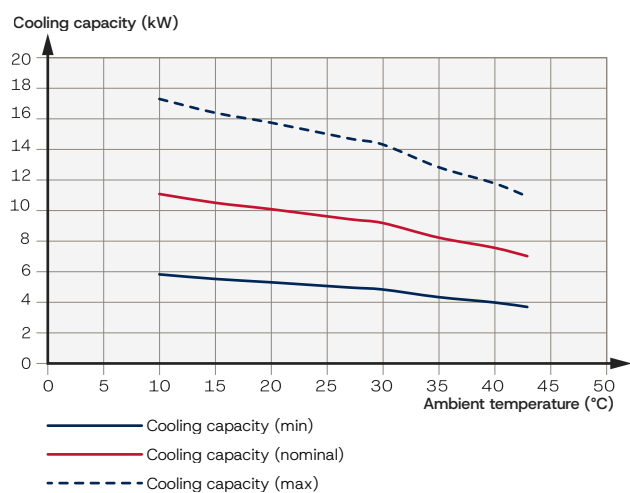


Pressure drop

QA-9

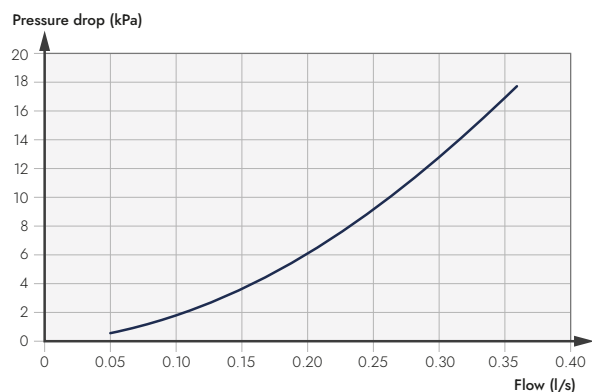


QA-15

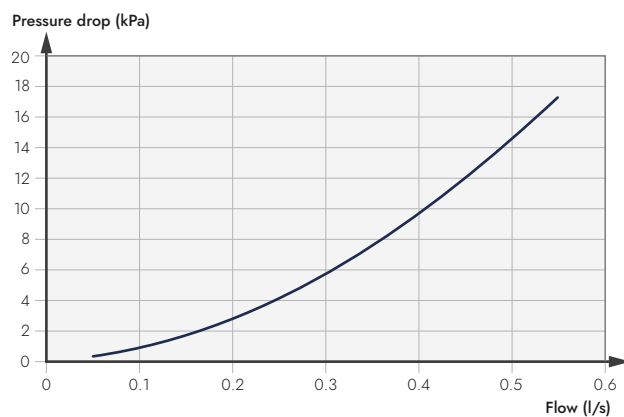

Operational range

Operational range during heating.

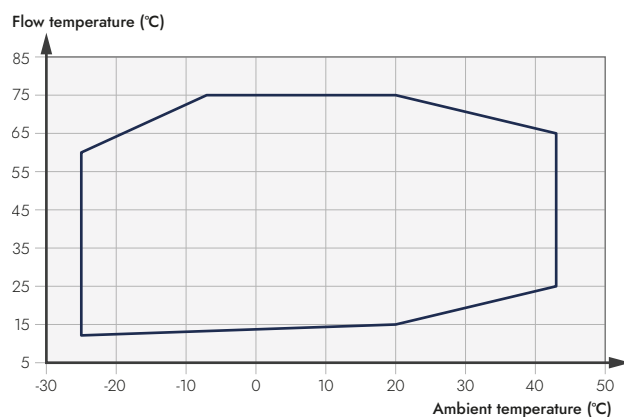

Technical data

MODEL		QA9	QA15-1	QA15-3
Energy efficiency, average climate				
The product's efficiency class room heating, average climate 35 / 55 °C		A+++ / A++	A+++ / A++	A+++ / A++
The system's efficiency class room heating, average climate 35 / 55 °C		A+++ / A++	A+++ / A+++	A+++ / A++
Output data (EN14825)				
Nominal heating output (P _{designh}), cold climate 35 / 55 °C	kW	4.3 / 4.1	8.0 / 8.0	8.1 / 8.0
Nominal heating output (P _{designh}), average climate 35 / 55 °C	kW	4.9 / 4.7	9.5 / 9.0	9.3 / 9.2
Nominal heating output (P _{designh}), warm climate 35 / 55 °C	kW	7.2 / 7.0	11.1 / 11.2	11.1 / 11.2
SCOP cold climate, 35 °C / 55 °C		4.02 / 3.15	4.40 / 3.53	4.37 / 3.57
SCOP average climate, 35 °C / 55 °C		5.05 / 3.61	4.94 / 3.72	4.92 / 3.67
SCOP warm climate, 35 °C / 55 °C		6.11 / 4.69	6.03 / 4.69	5.94 / 4.70
Heating capacity and COP (EN14511)				
Nominal heating capacity (A7/W35)	kW	6.38	9.99	8.38
Nominal heating capacity (A7/W55)	kW	5.58	9.52	9.6
Max. heating capacity (A-10/W55)	kW	4.72	9.15	8.69
COP (A7/W35)		4.94	4.71	3.96
COP (A7/W55)		3.04	3.0	3.04
Refrigerant circuit				
Type of refrigerant (GWP)		R290 (0.02)		
CO ₂ equivalent	kg	0.01	0.017	0.017
Refrigerant quantity	kg	0.5	0.85	0.85
Cut-out value pressostat LP	MPa/bar	0.8 / 8		
Cut-out value pressostat HP	MPa/bar	3.0 / 30		
Heating medium circuit				
Max pressure drop	kPa	40	20	20
Minimum flow	l/s	0.13	0.21	0.21
Nominal flow	l/s	0.28	0.47	0.47
Min. required flow during defrosting	l/s	0.2	0.33	0.33
Electrical data				
Rated voltage	V	230V 1N ~ 50Hz	230V 1N ~ 50Hz	400V 3N ~ 50Hz
Maximum power input	kW	3.0	5.3	5.3
Maximum current input	A	13.5	24.5	10.5
Recommended fuse	A	16	25	13
Recommended RCD type		B		
Enclosure class		IPX4		
Sound data				
Sound power level (L _{W(A)}) _{EN12102}	dB(A)	58	57	58
Sound power level, max (L _{W(A)})	dB(A)	64	64	64
Fan data				
Fan motor type		DC motor		
Fan motor power input (min~max)	W	55~105	60~120	60~120
Fan speed	rpm	300~600	220~600	220~600
Compressor oil				
Type		HAF68	HAF68	HAF68
Volume	ml	840 + 20	1150 + 20	1150 + 20
Connection dimensions				
Heating medium, external thread Ø		DN20	DN20	DN20
Recommended pipe dimension Ø ¹	mm	22	28	28
Weight and dimensions				
Net weight	kg	98	140	140
W x D x H	mm	1165 x 400 x 795	1287 x 465 x 928	1287 x 465 x 928
Gross weight ²	kg	140	189	189
W x D x H with packaging	mm	1400 x 500 x 1200	1400 x 500 x 1200	1400 x 500 x 1200
Misc				
Ambient temperature range, min-max	°C	-25~43		
Part no.		1003595	1003597	1003609

¹ If the pipework from the QA9 is 5 m or longer a Ø28 mm pipe is recommended.

² The weight includes the packaging and the supplied components

Energy labelling

Data for energy efficiency of the product

SUPPLIER		QVANTUM	QVANTUM	QVANTUM
MODEL		QA9 + QH-175	QA15-1 + QH-175	QA15-3 + QH-175
Temperature application	°C	35 / 55	35 / 55	35 / 55
Declared load profile for water heating		XL	XL	XL
Seasonal space heating energy efficiency class, average climate		A+++ / A++	A+++ / A++	A+++ / A++
Water heating energy efficiency class, average climate		A	A	A
Rated heat output (P_{designh}), average climate	kW	4.9 / 4.7	9.5 / 9.0	9.3 / 9.2
Annual energy consumption space heating, average climate	kWh	2013 / 2701	3956 / 5014	3899 / 5200
Annual energy consumption water heating, average climate	kWh	1923	1928	2000
Seasonal space heating energy efficiency, average climate	%	199 / 141	195 / 146	194 / 144
Water heating energy efficiency, average climate	%	86	85.3	82.2
Sound power level L_{WA} indoors	dB	35	35	35
Sound power level L_{WA} outdoors	dB	58	57	58

Data for energy efficiency of the package

MODEL		QA9	QA15-1	QA15-3
CONTROLLER		QH-175	QH-175	QH-175
Temperature application	°C	35 / 55	35 / 55	35 / 55
Controller, class		VI	VI	VI
Controller, contribution to efficiency	%	4	4	4
Seasonal space heating energy efficiency of the package, average climate	%	203 / 145	199 / 150	198 / 148
Seasonal space heating energy efficiency class of the package, average climate		A+++ / A++	A+++ / A+++	A+++ / A++

Technical documentation

QA9

MODEL		QA9 + QH-175						
Type of heat pump		☒ Air-water						
		☐ Exhaust-water						
		☐ Brine-water						
		☐ Water-water						
Low-temperature heat pump		☐ Yes ☒ No						
Integrated immersion heater for additional heat		☒ Yes ☐ No						
Heat pump combination heater		☒ Yes ☐ No						
Climate		☒ Average ☐ Cold ☐ Warm						
Temperature application		☒ Medium (55°C) ☐ Low (35°C)						
Applied standards		EN 14825, EN 16147						
Rated heat output	Prated	4.7	kW	Seasonal space heating energy efficiency		ηs	141	%
Declared capacity for space heating at part load and at outdoor temperature Tj				Declared coefficient of performance for space heating at part load and at outdoor temperature Tj				
Tj = −7 °C	Pdh	4.2	kW	Tj = −7 °C		COPd	2.40	–
Tj = +2 °C	Pdh	2.5	kW	Tj = +2 °C		COPd	3.49	–
Tj = +7 °C	Pdh	2.4	kW	Tj = +7 °C		COPd	4.58	–
Tj = +12 °C	Pdh	2.9	kW	Tj = +12 °C		COPd	5.96	–
Tj = biv	Pdh	4.2	kW	Tj = biv		COPd	2.40	–
Tj = TOL	Pdh	4.73	kW	Tj = TOL		COPd	2.05	–
Tj = −15 °C (if TOL < −20 °C)	Pdh		kW	Tj = −15 °C (if TOL < −20 °C)		COPd		–
Bivalent temperature	Tbiv	−7	°C	Min. outdoor air temperature		TOL	−10	°C
Cycling interval capacity	Pcyh		kW	Cycling interval efficiency		COPcyc		–
Degradation coefficient	Cdh	0.98	–	Max supply temperature		WTOL		°C
Power consumption in modes other than active mode				Additional heat				
Off mode	P _{OFF}	0.008	kW	Rated heat output		P _{sup}	0.0	kW
Thermostat-off mode	P _{TO}	0.012	kW					
Standby mode	P _{SB}	0.008	kW	Type of energy input		Electric		
Crankcase heater mode	P _{CK}	0.008	kW					
Other items								
Capacity control	Variable			Rated air flow (air-water)			2400	m³/h
Sound power level, indoors/outdoors	L _{WA}	35/58	dB	Nominal heating medium flow				m³/h
Annual energy consumption	Q _{HE}	2701	kWh	Brine flow (brine-water or water-water heat pumps)				m³/h
For heat pump combination heater								
Declared load profile for water heating	XL			Water heating energy efficiency		η _{wh}	86	%
Daily energy consumption	Q _{elec}	7.77	kWh	Daily fuel consumption		Q _{fuel}		kWh
Annual energy consumption	AEC	1923	kWh	Annual fuel consumption		AFC		GJ
Contact information	Quantum Energi AB – Ji-te gatan 7 – 265 38 Åstorp – Sweden							

QA15-1

MODEL		QA15-1 + QH-175						
Type of heat pump		☒ Air-water						
		☐ Exhaust-water						
		☐ Brine-water						
		☐ Water-water						
Low-temperature heat pump		☐ Yes ☒ No						
Integrated immersion heater for additional heat		☒ Yes ☐ No						
Heat pump combination heater		☒ Yes ☐ No						
Climate		☒ Average ☐ Cold ☐ Warm						
Temperature application		☒ Medium (55°C) ☐ Low (35°C)						
Applied standards		EN 14825, EN 16147						
Rated heat output	Prated	9.0	kW	Seasonal space heating energy efficiency		ηs	146	%
Declared capacity for space heating at part load and at outdoor temperature Tj				Declared coefficient of performance for space heating at part load and at outdoor temperature Tj				
Tj = -7 °C	Pdh	8.1	kW	Tj = -7 °C		COPd	2.24	-
Tj = +2 °C	Pdh	4.9	kW	Tj = +2 °C		COPd	3.63	-
Tj = +7 °C	Pdh	4.5	kW	Tj = +7 °C		COPd	4.90	-
Tj = +12 °C	Pdh	5.3	kW	Tj = +12 °C		COPd	6.46	-
Tj = biv	Pdh	8.1	kW	Tj = biv		COPd	2.24	-
Tj = TOL	Pdh	9.15	kW	Tj = TOL		COPd	2.04	-
Tj = -15 °C (if TOL < -20 °C)	Pdh		kW	Tj = -15 °C (if TOL < -20 °C)		COPd		-
Bivalent temperature	Tbiv	-7	°C	Min. outdoor air temperature		TOL	-10	°C
Cycling interval capacity	Pcyc		kW	Cycling interval efficiency		COPcyc		-
Degradation coefficient	Cdh	0.98	-	Max supply temperature		WTOL		°C
Power consumption in modes other than active mode				Additional heat				
Off mode	POFF	0.008	kW	Rated heat output		Psup	0.0	kW
Thermostat-off mode	PTO	0.016	kW					
Standby mode	PSB	0.008	kW	Type of energy input		Electric		
Crankcase heater mode	PCK	0.008	kW					
Other items								
Capacity control	Variable			Rated air flow (air-water)			4000	m³/h
Sound power level, indoors/outdoors	LWA	35/57	dB	Nominal heating medium flow				m³/h
Annual energy consumption	QHE	5014	kWh	Brine flow (brine-water or water-water heat pumps)				m³/h
For heat pump combination heater								
Declared load profile for water heating	XL			Water heating energy efficiency		ηwh	85.3	%
Daily energy consumption	Qelec	7.60	kWh	Daily fuel consumption		Qfuel		kWh
Annual energy consumption	AEC	1928	kWh	Annual fuel consumption		AFC		GJ
Contact information	Qvantum Energi AB – Ji-te gatan 7 – 265 38 Åstorp – Sweden							

QA15-3

MODEL		QA15-3 + QH-175						
Type of heat pump		☒ Air-water						
		☐ Exhaust-water						
		☐ Brine-water						
		☐ Water-water						
Low-temperature heat pump		☐ Yes ☒ No						
Integrated immersion heater for additional heat		☒ Yes ☐ No						
Heat pump combination heater		☒ Yes ☐ No						
Climate		☒ Average ☐ Cold ☐ Warm						
Temperature application		☒ Medium (55°C) ☐ Low (35°C)						
Applied standards		EN 14825, EN 16147						
Rated heat output	Prated	9.2	kW	Seasonal space heating energy efficiency		ηs	144	%
Declared capacity for space heating at part load and at outdoor temperature Tj				Declared coefficient of performance for space heating at part load and at outdoor temperature Tj				
Tj = -7 °C	Pdh	8.0	kW	Tj = -7 °C		COPd	2.21	-
Tj = +2 °C	Pdh	4.9	kW	Tj = +2 °C		COPd	3.64	-
Tj = +7 °C	Pdh	4.5	kW	Tj = +7 °C		COPd	4.66	-
Tj = +12 °C	Pdh	5.2	kW	Tj = +12 °C		COPd	6.38	-
Tj = biv	Pdh	8.0	kW	Tj = biv		COPd	2.21	-
Tj = TOL	Pdh	8.7	kW	Tj = TOL		COPd	1.94	-
Tj = -15 °C (if TOL < -20 °C)	Pdh		kW	Tj = -15 °C (if TOL < -20 °C)		COPd		-
Bivalent temperature	Tbiv	-7	°C	Min. outdoor air temperature		TOL	-10	°C
Cycling interval capacity	Pcyc		kW	Cycling interval efficiency		COPcyc		-
Degradation coefficient	Cdh	0.99	-	Max supply temperature		WTOL		°C
Power consumption in modes other than active mode				Additional heat				
Off mode	P _{OFF}	0.01	kW	Rated heat output		P _{sup}	0.54	kW
Thermostat-off mode	P _{TO}	0.01	kW					
Standby mode	P _{SB}	0.01	kW	Type of energy input		Electric		
Crankcase heater mode	P _{CK}	0.01	kW					
Other items								
Capacity control	Variable			Rated air flow (air-water)			4000	m³/h
Sound power level, indoors/outdoors	L _{WA}	35/58	dB	Nominal heating medium flow				m³/h
Annual energy consumption	Q _{HE}	5200	kWh	Brine flow (brine-water or water-water heat pumps)				m³/h
For heat pump combination heater								
Declared load profile for water heating	XL			Water heating energy efficiency		η _{wh}	82.2	%
Daily energy consumption	Q _{elec}	7.6	kWh	Daily fuel consumption		Q _{fuel}		kWh
Annual energy consumption	AEC	2000	kWh	Annual fuel consumption		AFC		GJ
Contact information	Qvantum Energi AB - Ji-te gatan 7 - 265 38 Åstorp - Sweden							

Index

A

Accessories [6](#)

B

Before installing
Transport [5](#)

C

Commissioning [18](#)

E

Electrical connections [15](#)
Power connection [15](#)
Electrical installation [14](#)
Hydronic unit [16](#)
Environmental information [4](#)

I

Important information
Environmental information [4](#)
Product labels [4](#)
Safety [3](#)

P

Pipe connections [8](#)
Pipe installation
Installation [9](#)
Preparations [8](#)

S

Supplied components [6](#)

T

Technical specifications
Dimensions [22](#)
Energy labelling [25](#)
Sound levels [22](#)
Technical data [24](#)
Transport [5](#)
Troubleshooting [20](#)
Before troubleshooting [20](#)

This publication presents information that was valid at the time of publishing.
Qvantum reserves the right to make changes without prior notification.
Subject to possible printing errors.
©2026 Qvantum Energi AB



Changing the way cities are heated.

Qvantum
Ji-te gatan 7, 265 38 Åstorp Sweden
qvantum.com

QCH EN 2624-D



1008776